



**BA 092, BA 093, BA 100
Side Steps
Fitting Instructions.**

The Kit should include the following parts.

1 Pair of Side Steps	12 M10 x 30 bolts
1 Pair of Short Brackets (front)	12 M10 nyloc nuts
1 Pair of Long Brackets (rear)	24 10mm flat washers




Tools required.

12mm drill

Spanners/socket. A 17mm spanner. .

Instructions

- First separate out the short (for the front) and long (for the rear) brackets, and bolt them to the steps. Note in fig 1 how the brackets kink inwards to each other.
- Remove the nuts from the end of the out riggers,(both between the front and rear wheels) picking up the body mounting bolts.
- Then lift the step into position and fix to the out riggers.
- It is now necessary to drill one hole in each out rigger to secure the mounting brackets. (on earlier models, pack between the mounting bolt and out rigger with washers).
- Secure the step with the nuts, bolts and washers provided. It may be necessary to slacken other nuts in order to position the step as desired.
- Finally check all nuts and bolts are tight and repeat for other side.

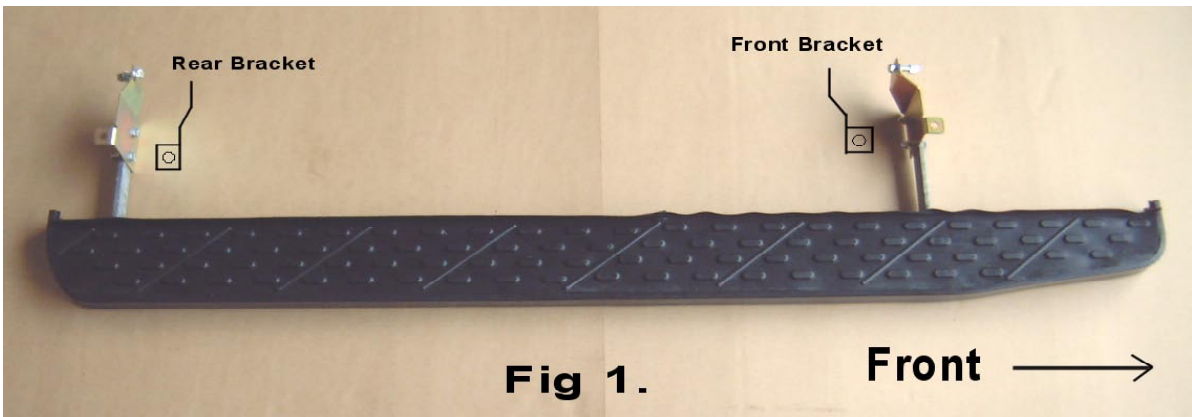

This illustrates a similar bracket being fitted to rear outrigger

