

## BA 111 S FITTING INSTRUCTIONS

### KIT CONTENTS

8 X M8 RIVNUTS

8 X M8 BOLTS & WASHERS

4 X M8 U BOLTS NUTS & WASHERS

8 X M10 BOLTS & NUTS

16 X M10 WASHERS

8 X BRACKETS

1

Locate pre drilled holes in chassis and fit rivnuts (procedure leaflet enclosed) attach brackets pictured right to chassis with M8 bolts and washers supplied.




2

Attach angle bracket to chassis bracket pictured right the shorter angle iron brackets fit to the front bracket do not fully tighten fixings at this stage any freeplay will be reqd at a later stage for alignment and levelling.



3

The underside of the step has a box section running from front to rear, The U bolts fit around box section and through angle brackets . Now level and align step before finally tightening all fixings.

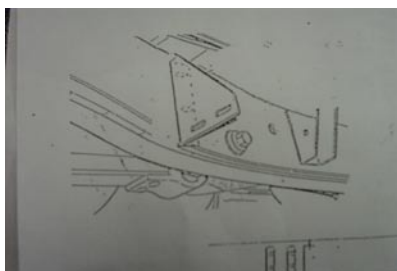

front



rear